

# RC Preschool Lil' Roadster

60-2788

OWNER'S MANUAL — Please read before using this equipment.

## ! IMPORTANT !

If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning    ! — Important    ✓ — Note  
⚡ — Caution    💡 — Hint

## ⚠ WARNING ⚠

Dispose of old batteries promptly and properly. Do not burn or bury them.


Thank you for purchasing the RadioShack RC Preschool Lil' Roadster. Your roadster is built to handle the road in style, whether indoors or outside. It can reach speeds of up to 250 feet per minute. It is perfect for kids, ages three & up.

## INSTALLING BATTERIES

You need four AA batteries to power the roadster, and one 9-volt battery for its transmitter (not supplied) For the best performance and longest life, we recommend RadioShack alkaline batteries. ⚠

## IN THE ROADSTER

1. Set ON/OFF, located in front of the dog, to OFF.

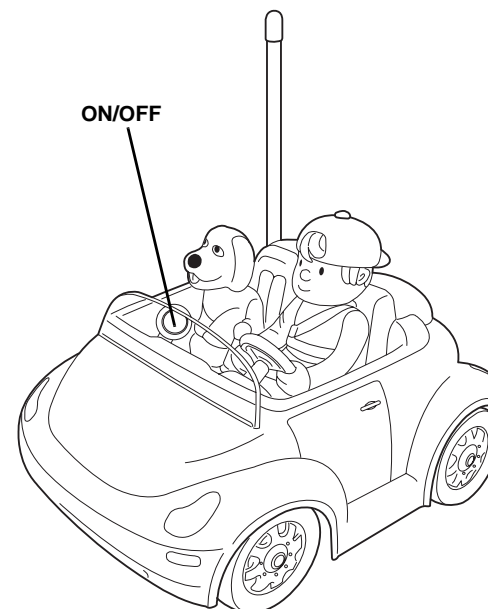


**RadioShack®**  
www.radioshack.com™

© 2002 RadioShack Corporation.  
All Rights Reserved.  
RadioShack and RadioShack.com are trademarks  
used by RadioShack Corporation.

### ⚠ CAUTION ⚠

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable) or rechargeable batteries of different capacities.
- If you do not plan to use the roadster for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Do not play with your roadster in the street.


2. Use a Phillips screwdriver to remove the battery compartment cover's screw from the bottom of the roadster, then remove the cover.
3. Place the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside. ⚠
4. Insert the battery compartment cover's tabs into the slots on the battery compartment, then replace the cover and secure it with the screw.

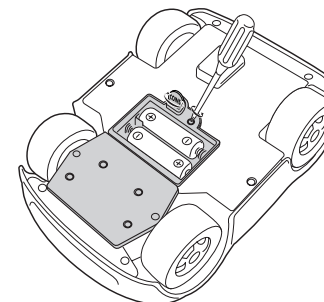

When the roadster stops operating properly, replace the batteries. The roadster's battery life is about 40 minutes of continuous driving.

### IN THE TRANSMITTER

1. Use a Phillips screwdriver to remove the battery compartment cover's screw, then remove the cover.
2. Place a 9V battery in the compartment according to the polarity symbols (+ and -) marked inside.
3. Insert the battery compartment cover's tabs into the slots on the battery compartment, then replace the cover and secure it with the screw.

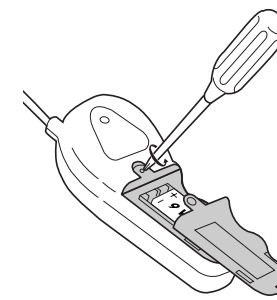


### OPERATION

1. Set ON/OFF to ON. ⚠
2. Hold down ↑ to move forward.
3. Release ↑ to stop.



- Running your roadster continuously for long periods generates high heat levels. Heat causes wear and tear on the motor. To help keep heat levels down, when your roadster's battery power dies, let the roadster cool at least 10 minutes before installing new batteries.
- If the roadster's motor runs but the roadster does not respond to the transmitter, move it closer to the roadster and try again. The control distance is about 40 feet.
- If someone uses a CB nearby, it might interfere with control of the roadster. If this happens, move the roadster away from the CB.
- You cannot operate your roadster near devices that use the same frequency (27 MHz).

4. Hold down  to circle backward.

5. When you finish driving the roadster, set ON/OFF to OFF. 

## THE FCC WANTS YOU TO KNOW

Your roadster might cause TV or radio interference even when it is operating properly. To determine whether your roadster is causing the interference, turn off your roadster. If the interference goes away, your roadster is causing it. Try to eliminate the interference by:

- moving your roadster away from the receiver
- contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your roadster.

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this product not expressly approved by RadioShack, or operation of this product in any way other than as detailed by the Owner's Manual, could void your authority to operate the product.

## CARE

Keep the roadster dry; if it gets wet, wipe it dry immediately. Use and store the roadster only in normal temperature environments. Handle the roadster carefully; do not drop it. Keep the roadster away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

If your roadster is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the roadster's internal components can cause a malfunction and might invalidate its warranty and void your FCC authorization to operate it.

#### **Limited Ninety-Day Warranty**

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company- owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99